
Window Measuring Sheet



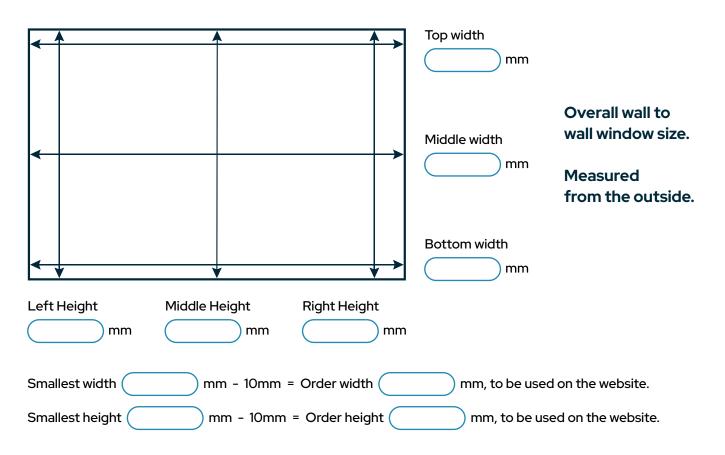

Summary Guide

- Measure your window from the outside of the property.
- Measure the brickwork opening in 3 places for both width and height.
- Of the 3 measurements use the smallest and deduct approximately 10mm, that's your order size.
- Always measure in millimetres (mm).
- The height measurements must be from underneath of any existing removable cill (except stone cills or if you're ordering windows without cills).
- If your property is rendered, remove some render and measure to the brickwork edge.

Please note: We are unable to accept responsibility for incorrect measurements. If you are unsure we recommend that you consult a professional installer/builder.

Window	Always measure from under any existing removable cill unless you are keeping the existing cill or buying a cill from somewhere else	Window
Cill with lip	Start magning from barg	Cill without lip
	Start measuring from here Not from here	
Wall		Wall

Need help? Call us on +44 (0) 20 3355 5311

Unit B4 Sterling Works, Rainham Road South, Dagenham RM10 8TX | glassopenings.co.uk | info@glassopenings.co.uk